

Please follow the instruction carefully to ensure the desired benefit of the extender.

Remove the two Height adjusting knobs **(1)** from the Clip-on set.

Place the screen with the Front clamp **(2)** as highlighted in **BLUE** over the slot provided in the Height adjustment Slider again highlighted in **BLUE** **(3)**. Match the **RED** highlighted part.

Now insert and tighten the adjusting knobs **(1)** as shown in figure “A”.

Loosen the CSK Allen Head Screws **(4)** which is preinstalled in Clip-on Mount **(5)** using the Allen key provided and position the extender symmetrically onto the OE screen and tighten it back.

Note: Some parts are pre-assembled, though the Easy Ride is designed for DIY installation, it is recommended you have the Easy Ride installed by a technician if you face difficulty.

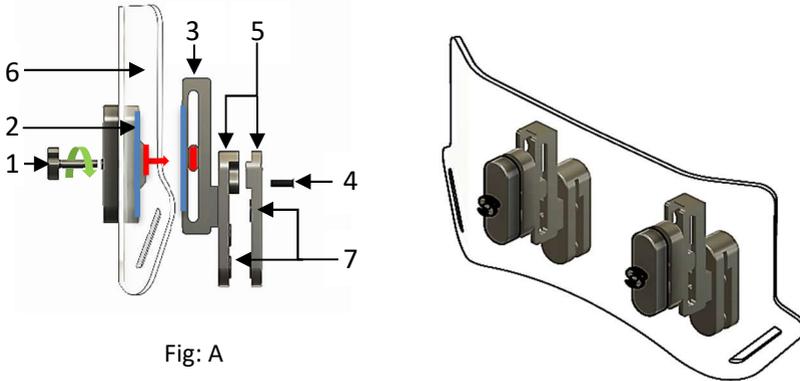


Fig: A

! Extender to be cleaned using water, neutral soap and sponge or microfiber cloth. Never wipe using dry cloth or use solvent as they may scratch or damage the surface texture permanently. Ensure to clean the OE screen for any anti scratch chemical coating as this would affect the ability of the clamp to hold the Screen.

Sl.	DESCRIPTION	QTY.
1	Height Adjusting Knobs (set)	1
2	Front Clamp (set)	1
3	Height Adjustment Slider (set)	1
4	CSK Allen Head Screw M4 X 12	8
5	Clip on Mount (set)	1
6	Screen	1
7	Silicon Pads	8

Note: For windscreen thickness 3 – 5 mm